

TECHNICAL DATA SHEET

DESCRIPTION


The Aztec EZ Set Chair supports an upper reinforcement mat with the ability to straddle lower reinforcement mats.

APPLICATION

The Aztec EZ Set Chair is placed on the forming surface in the desired orientation to provide the specified height of rebar cover. The upper reinforcement mat can then be placed on top of the chair and tied-off to the "X" feature on the chair.

PRODUCT SPECIFICATION

- Fits rebar sizes #3 to #10
- Cover heights available from 2.75" to 14.00" in 1/4" increments

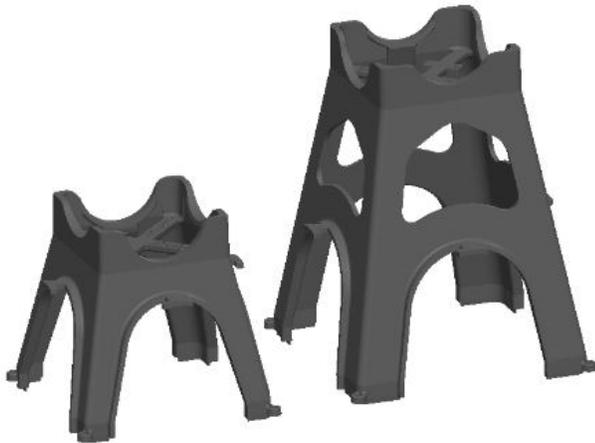

FEATURES

- Standard "concrete gray" color
- Minimal surface contact with deck
- Straddles lower rebar mat in double mat applications
- Upper and lower reinforcement mat tie-off points
- Nail-down feature to secure to deck
- Designed for maximum aggregate flow and concrete consolidation

BENEFITS

- No assembly required - one solid molded chair
- Versatile design for the application you need
- Non-corrosive material

APPROVALS / COMPLIANCE

- Conforms to CRSI specifications

INSTALLATION

1. Place on decking or formwork; straddling lower mat if applicable
2. Place upper mat on top of chair at the desired cover height

RELATED PRODUCTS

- PSC - Aztec® Straddle Chair™
- PTC - Aztec® Tower Chair™
- PHC - Aztec® HY Chair™ (Hybrid)

HOW TO ORDER

- Specify (1) quantity (2) name (3) rebar cover height Example: 250, Aztec EZ Set Chair, 3-1/4" - 3-1/2"

ORDERING INFORMATION

AZTEC® EZ SET CHAIR™

Product Code	Description	Weight
101130	2-3/4" - 3"	0.09 LB
101131	3-1/4" - 3-1/2"	0.10 LB
101132	3-3/4" - 4"	0.10 LB
101133	4-1/4" - 4-1/2"	0.11 LB
101134	4-3/4" - 5"	0.16 LB
101135	5-1/4" - 5-1/2"	0.18 LB
101136	5-3/4" - 6"	0.18 LB
101137	6-1/4" - 6-1/2"	0.19 LB
101138	6-3/4" - 7"	0.22 LB
101139	7-1/4" - 7-1/2"	0.24 LB
101140	7-3/4" - 8"	0.25 LB
101141	8-1/4" - 8-1/2"	0.26 LB
101142	8-3/4" - 9"	0.28 LB
101143	9-1/4" - 9-1/2"	0.29 LB
101144	9-3/4" - 10"	0.30 LB
101145	10-1/4" - 10-1/2"	0.31 LB
101146	10-3/4" - 11"	0.35 LB
101147	11-1/4" - 11-1/2"	0.36 LB
101148	11-3/4" - 12"	0.38 LB
101149	12-1/4" - 12-1/2"	0.39 LB
101151	12-3/4" - 13"	0.41 LB
101152	13-1/4" - 13-1/2"	0.43 LB
101153	13-3/4" - 14"	0.44 LB

MANUFACTURER

Dayton Superior Corporation
 1125 Byers Road
 Miamisburg, OH 45342
 Customer Service: 888-977-9600
 Technical Services: 877-266-7732
 Website: www.daytonsuperior.com

TECHNICAL DATA SHEET

WARRANTY (ACCESSORIES)

Limited Warranty. Dayton warrants, for a period of 60 days from the date of shipment (three years from the date of shipment in the case of formwork, excluding any consumable Products included with such formwork), that Products and any associated application drawings and engineering services provided by Dayton ("Ancillary Services") will be free from defects in material and workmanship and, in the case of custom designed formwork, that the formwork will meet the specifications set forth in the design drawings approved by Dayton and Customer. Any claim under this warranty must be made in writing within such warranty period. If any Product and/or Ancillary Service covered by a timely claim are found to be defective, Dayton will, within a reasonable time, make any necessary repairs or corrections or, at Dayton's option, replace the Product. Unless pre-authorized by Dayton in writing, Dayton will not accept any charges for correcting defects or accept the return of any Product. This warranty will not apply to any Products that have been subjected to misuse, neglect, storage damage, misapplication, accident or any other damage caused by any person other than Dayton, or that have not been maintained in accordance with Dayton's specifications. THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AS TO THE PRODUCTS AND ANCILLARY SERVICES. DAYTON MAKES NO OTHER WARRANTIES OR GUARANTEES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE. THE REMEDIES SET FORTH IN THIS SECTION ARE CUSTOMER'S EXCLUSIVE REMEDY FOR BREACH OF WARRANTY.